



AUTOLIFT S.r.l.

Lift “F900”

Installation Manual Volkswagen T5



www.autoliftsrl.com



AUTOLIFT S.r.l.

Lift "F900"

1-VEHICLE


Remove Plastic cover of vehicle bottom

2-REMOVE ORIGINAL TANK

Remove original tank – drill the tank supports and remove them.

Remove the fuel pump.

Cut the filling tube from the tank and remove the non-return valve.

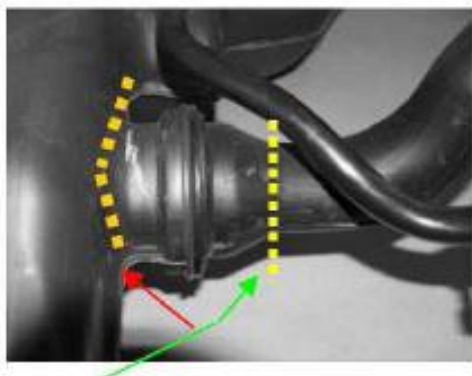

Cut the filling tube in this area



Do not damage the no-return valve



Remove the valve from the original tube




AUTOLIFT S.r.l.

Lift “F900”

3- FUEL PUMP

Put the pump on flat surface. It is necessary to adapt the level indicator to the new tank : bend the float in order to make it 5cm higher

Float modification:
make it 2.5 cm higher

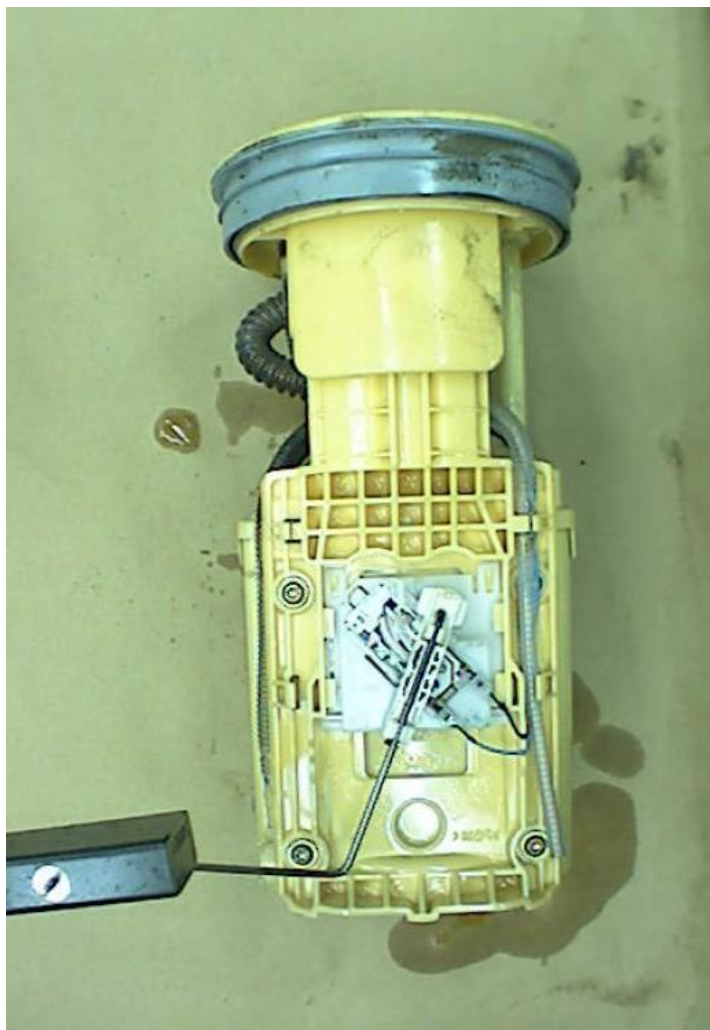

3- SPECIAL TANK

Put the valve in to the from the inside and fix with a support or special bush so that it won't fall in the tank.

Place the shorten filling tube in the new tank using the rubber tube and clamps.



Place the original Fuel pump and please check the pump orientation (30° angle)



Angle 30°

Fix the new tank to the vehicle:

- M8 screws in to the original fixing points
- Special support

1x M8 Screws at both sides


Special support



More pictures of special tank fixation



Special support

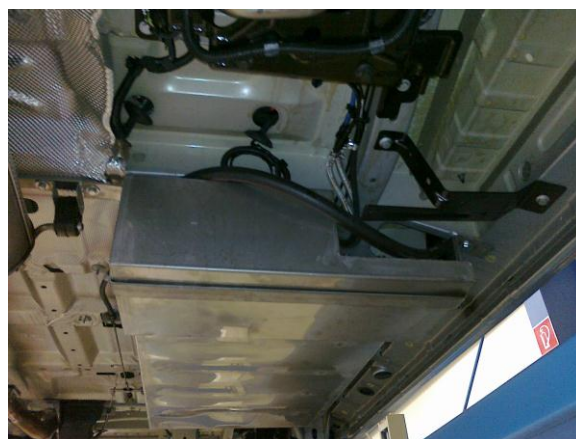


Special support



Special support

M8 Screw in original
fixing point

Special support

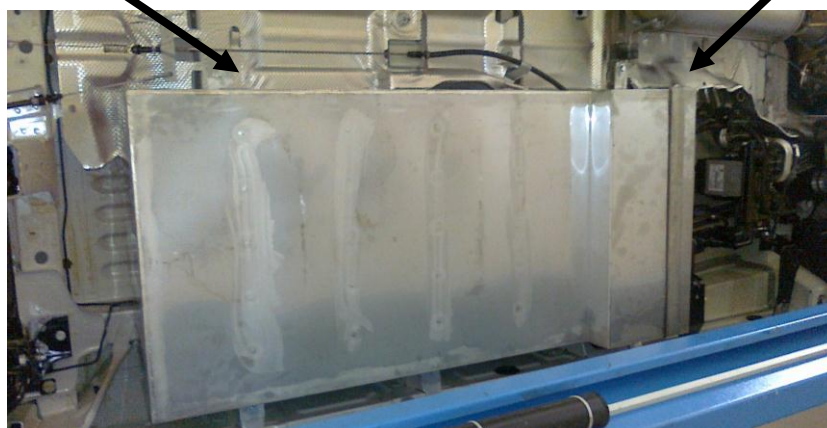

M8 Screw in original
fixing point

Tank seen from the bottom

5. EXHAUST SYSTEM



Dismount the original exhaust from the vehicle



Cut the original pipes of the central exhaust



Weld the new pipe



Connect the welded pipe to the back exhaust part



View from the rear



Front tube

6. LIFT INSTALLATION

Fix the lift to the vehicle with the special supports




Lift under the Tank



Exhaust is between lift and vehicle bottom

7. HYDRAULIK AND ELECTRIC BOX

The hydraulic power pack is built in protection box. Just disconnect the quick coupling and place the power pack in the vehicle in the preferred position .

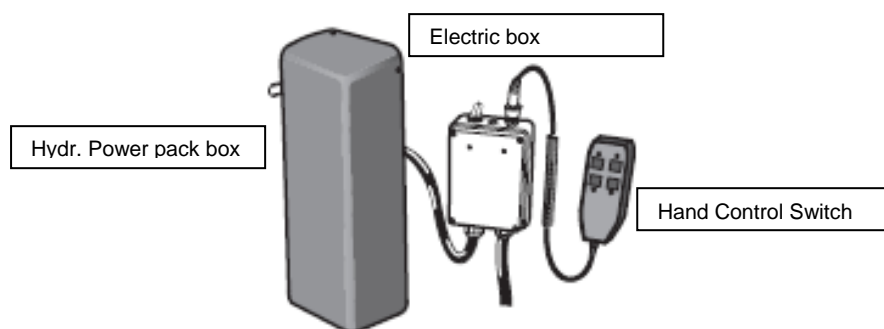


8. LIFTING HEIGHT

If necessary you can set afterwards the max lifting height



Installation Manual

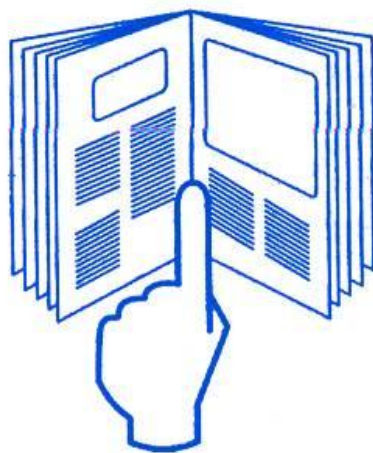

For a correct installation and safe use of the lift please read carefully this installation manual

www.autoliftsrl.com